

## 4.14 Installation of entry and exit ramps

Kit models: 400 MB, 400 MC

4.14.1	The entry and exit ramps shall be lifted by attaching lifting belts or chains to the 4 lifting eyes.	
4.14.2	Slightly loosen the connecting bolts, carefully position the ramps and connect them with the wash elements.	